

Emeril™

Blender



Instructions for Use

T-fal



Blender

TABLE OF CONTENTS

Important Safeguards	3-4
Description	5
Using Your Appliance	6-7
Cleaning	8
Troubleshooting	9
Warranty	10

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before using the blender.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plug or appliance in water or other liquids.
- Close supervision is necessary when any appliance is used near children. This appliance is not intended for use by children.
- Unplug the appliance from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Keep hands and utensils out of the jar while blending in order to reduce the risk of severe injury to persons or damage to the blender. A scraper or wooden spoon may be used but only when the blender is not running and is unplugged.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to an authorized **T-fal** Service Center for examination, repair or electrical/mechanical adjustments.
- The use of attachments not recommended or sold by **T-fal** may cause fire, electric shock or injury.
- Do not use outdoors.
- To reduce the risk of injury do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.
- Blades are sharp. Handle carefully.
- Always operate the blender with the lid in place.
- When blending hot liquids, remove the measuring cup to allow steam to escape.
- Do not use the appliance for other than intended use.
- Do not place the blender jar in a microwave oven.
- This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized **T-fal** Service Center.
- Do not immerse base in water or any other liquid.
- Make sure the voltage of the appliance is in accordance with your domestic supply.
- To reduce the risk of fire or electric shock, do not dismantle the appliance. Repair should be done by an authorized **T-fal** Service Center only.
- Keep your hands and the cord away from hot parts during operation.
- Never clean with scouring powders or hard implements.
- Do not place or use the appliance on hot surfaces such as stoves, hotplates, or near open gas flames.
- Do not let the cord come in contact with hot surfaces such as the stove or hang over the edge of a table/counter.

- Do not expose the appliance to temperatures above 105°F.
- To disconnect blender, remove plug from wall outlet. Do not yank cord, instead grasp plug and pull to disconnect.
- Make sure that the lid is securely locked in place before operating the appliance.
- Do not open the lid until the blades have completely stopped.
- Never place the jar **(C)** on the motor unit **(F)** when motor is running.

SPECIAL CORD INSTRUCTIONS

Regarding your cord:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fully fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. If a long extension is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance (in this case 500 watts). Cords rated for less amperage may overheat.

 
 
 
Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SAVE THESE INSTRUCTIONS CAUTION

- This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized T-fal Service Center.
- To reduce the risk of fire or electric shock, do not remove the base.

No user serviceable parts inside. Repair should be done by an authorized T-fal Service Center only.

DESCRIPTION

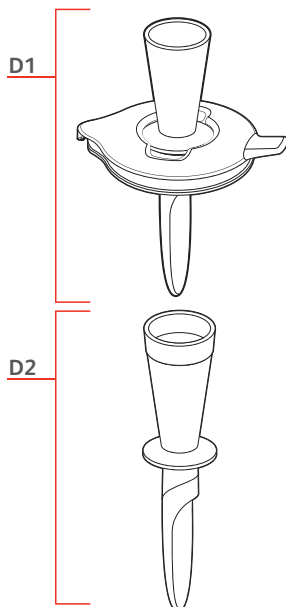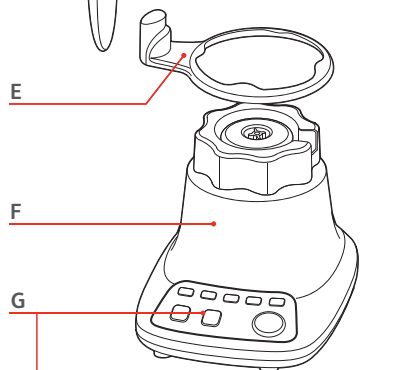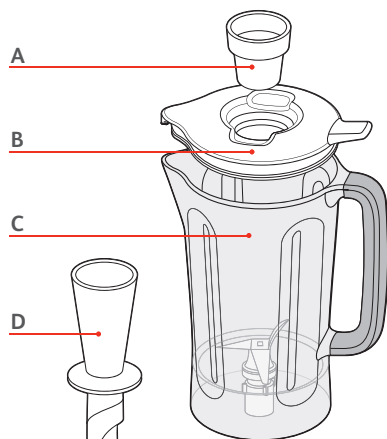

- A. Measuring cup (2 oz capacity)
- B. Lid with filling hole
- C. Blender jar (50 oz max. capacity)
- D. Mix stick
- E. Mix stick holder
- F. Motor Unit
- G. Soft touch electronic keyboard

USING YOUR APPLIANCE

Before use:

After unpacking the blender, wash everything, except the motor unit (F), in warm soapy water. Rinse and dry thoroughly. Wipe the motor unit (F) with a damp cloth or sponge.

DO NOT IMMERSE THE MOTOR UNIT (F) IN WATER. Care should be taken when handling the blades as they are very sharp.

Using the blender:

With the break resistant jar, you can make a variety of ice-based preparations with your blender.

- 1- Place the mix stick holder (E) on the motor unit (F) (fig. 1).
- 2- Place the jar (C) onto the motor unit (F) (fig. 2). You can place it with the handle either to the left or to the right of the soft touch electronic keyboard.
- 3- Put ingredients to be mixed into the jar (C) without exceeding the maximum level (50 oz) (fig. 3).
- 4- Lock the lid (B) with the measuring cup (A) inside the lid (fig. 4).
The lid must always be in place while the appliance is in operation.

Note:

- Remove the measuring cup (A) if you want to add more ingredients.
- You can add liquid when the mix stick is in place through the filling hole of the mix stick (D) (fig. 5)

Electronic keyboard functions (G):

Continuous operation:

Speeds 1 to 5 (shred, mix, blend, liquify, puree). Please see table on next page for a list of recommended speeds for each type of preparation. You will notice that the blades first perform a few fast turns, then gradually ramp up to the desired speed: this is an electronic control designed to optimize the mixing process. It is possible to change speeds during a preparation by simply pressing the desired speed.

Pulse function:

This function gives finer control over the degree of blending for precise, efficient preparations. The blender will run on this function as long as you keep the pulse button pressed.

Ice crush function:

This function automatically operates the motor intermittently for the preparation of finely crushed ice, smoothies or granitas. Put ice cubes into the jar (C) and put the lid on. You do not need to add water. Press the "Ice crush" button. Stop the appliance when the mix is complete by pressing the "Stop" button. For finely crushed ice, work with 10 large ice cubes (0.71 oz)

fig. 1



fig. 2



fig. 3



fig. 4



fig. 5



USING YOUR APPLIANCE

Stop function:

When your mix is ready, press the “stop” button to stop the blender. Wait until the blades have completely stopped before emptying the jar.

For a more uniform mixture, first place the liquid ingredients into the jar and operate the blender briefly before adding solid ingredients which will be drawn towards the blades.

SPEED	PREPARATIONS
1 - (slowest) - shred	Onions and shallots; hazelnuts, almonds, chocolate chips
2 - mix	Pancake, waffle and doughnut mixes
3 - blend	Milk shakes, mayonnaise, hummus
4 - liquify	Soups, fresh fruit cocktails, smoothies
5 - (fastest) - purée	Tomato sauces, cooked vegetable purees

Note:

- The appliance will automatically stop after one minute of constant use regardless of the speed setting. This is normal. To restart the blender, re-press your desired speed and the blender will start again.
- During the operation, you can alternate between the various speeds without using the “stop” button.

CLEANING

CAUTION: unplug the blender and take the jar off before attempting to clean the appliance.

- Clean the plastic body with a damp cloth. Dry carefully. To remove stubborn stains, use a mild, non-abrasive cleanser.
- Never immerse the motor unit **(F)** in water.
- Rinse the jar **(C)**, lid **(B)**, measuring cup **(A)**, mix stick **(D)** under running water. They can also be washed in the dishwasher.

HANDLE BLADES WITH GREAT CARE AS THEY ARE EXTREMELY SHARP AND CAN CAUSE INJURY.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Appliance does not work	The plug is not connected.	Connect the appliance to a socket with the same voltage as the blender rating plate.
Excessive vibration	The product is not placed on a flat surface.	Place the product on a flat surface.
Leak from lid	There is too much liquid in the jar. The lid is not correctly positioned.	Do not go over the maximum level of the jar (50 oz). Lock the lid onto the blender jar.
Blade does not turn easily	Pieces of food are too big or too hard.	Reduce size of pieces of food or quantity. Add liquid.

Disposal:

Check your local ordinances for disposal of your blender.

Consumer service:

If you have additional questions, please call our Consumer Service Department. It is helpful to have the product available at the time of your call and to know the reference number that can generally be found on the base of the product.

USA :

Online - www.t-falusa.com

Phone - 1-800-395-8325

Hours* Monday – Thursday from 8:30 a.m. – 5:00 p.m.
(EST), Friday 8:30 a.m. – 4:00 p.m. (EST)

Please note hours are subject to change.

Letters should be addressed to :

Groupe SEB – Consumer Service

2121 Eden Road

Millville NJ, 08332

Only letters can be accepted. Packages without a return authorization number will be refused.

ONE YEAR LIMITED WARRANTY

Groupe SEB USA (T-fal) warrants this product to be defect free in material and workmanship for a period of one year from the date of purchase. This warranty extends to the original purchaser and any subsequent owner within the warranty period. If a defect is found to exist, T-fal will, at its option, either repair or replace the product or the defective component, including labor. Replacement will be made with new or rebuilt product or components.

Proof of purchase is required to obtain warranty service, so keep the register receipt. If a product or component is returned without proof of purchase it will be reviewed based on the manufacturing production week and year to determine if there is warranty coverage.

This warranty does not apply to any unit that has been tampered with, nor to damages incurred through improper use and care, faulty packaging by you or mishandling by any common carrier.

T-fal's sole obligation and your exclusive remedy under this warranty is limited to such repair or replacement.

THE DURATION OF ANY IMPLIED WARRANTY WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY PROVIDED HEREIN.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

T-fal SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other legal rights which vary from State to State.

To obtain warranty service:

1. Do not return the product to the retailer from which it was purchased.
2. Please contact our consumer service department (1-800-395-8325 M-Th 8:30am – 5pm & Fr 8:30am – 4pm EST) for assistance and to ensure the fastest possible resolution to the problem. Please have the model or type number of your product on hand. If it is determined that you should return your product or a component of the product for warranty service, you will be given a return authorization number.
3. Send the product or component, postage-paid, together with proof of purchase, a description of the problem, and the return authorization number you were given, to the closest authorized T-fal return facility (see www.T-falusa.com or call 1-800-395-8325).
4. Be sure to include your name, address and home telephone number with your shipment. Another contact number is suggested in case you need to be contacted.
5. We suggest that you carefully wrap your package for shipping and send by insured and/or traceable means.

